

FEATURES OF THE WIFI FINDER

- Detects up to 50 meters (+150 feet) in distance
- Easy to operate
- Simple one button push activates and detect for about 60 seconds (1 minute)
- Look at the LED light color (red, yellow, or green) to find out the wireless internet status

FEATURES OF WIRELESS CAM FINDER

- Detects up to 50 meters (+150 feet) in distance
- Finds nearby wireless hidden cameras/monitoring devices
- Easy to operate
- Simple one button push to activate and detect about 45 seconds
- LED color (red, yellow, or green) and a beeping sound lead you to the hidden wireless camera

HOW TO USE THE WIFI FINDER

- Slide the switch on the left side to "WLAN"
- Press the button once; the red light will start to search. After a few seconds:
 - If the RED LED keeps *flashing*: It has detected little or no 802.11b/802.11g wireless signal. The area you are in is not favorable for a wireless internet connection.
 - If the RED LED stays *ON*: It has detected a weak wireless signal. A wireless connection may be possible, but it will not be stable.
 - If both the RED & YELLOW LEDs stay *ON*: It has detected a good wireless signal. The area is favorable for accessing a wireless internet connection.
 - If all three RED, YELLOW, & GREEN LEDs stay *ON*: It has detected a strong wireless signal. The area is ideal for accessing a wireless internet connection.
- Once the button is pressed the Wifi Finder will search for 60 seconds (1 minute) and then automatically stop.

HOW TO USE THE WIRELESS CAM FINDER

- Slide the switch on the left side to "CAM"
- Press the button once; the red light will start to search. After a few seconds:
 - If the RED LED keeps *flashing*: It has detected no wireless surveillance/camera signals.
 - If the RED LED stays *ON* & there is a long interval *beep* sound: It has detected a weak wireless surveillance/camera signal.
 - If both the RED & YELLOW LEDs stay *ON* & there is a short interval *beep* sound: It has detected a good wireless surveillance/camera signal.
 - If all three RED, YELLOW, & GREEN LEDs stay *ON* & there is a shorter interval *beep* sound: It has detected a strong wireless surveillance/camera signal.
- Once the button is pressed the Wireless Cam Finder will search for 45 seconds and then automatically stop.

BATTERY REPLACEMENT

- If the detecting distance is obviously shorter than usual, this may indicate that you need to replace the batteries.
- Unscrew the back cover of the unit. (See Drawing I)
- Take out the two old CR2032 lithium batteries (included) and replace with two fresh CR2032 batteries.

NOTES

- Due to environmental differences, the detecting distance may vary from place to place.
- While in detecting mode, sudden flashing of Wifi Finder's LED lights indicates that it is detecting a complicated 2.4 GHz environment. Please ignore these flashes and instead only focus on steady LEDs for the actual indication of an area's particular WiFi status.
- For best performance, please hold unit from one corner (See Drawing II). This will allow the internal antenna to work normally.

